

Thank you for purchasing this AegisGuard™ XP Radiation Shield.

**IMPORTANT:** Excluding extendable antenna masts, your wireless product must be smaller than this Shield.

### AegisGuard™ Phone Radiation Shield Users

In a pocket, pouch or purse and with the front of the phone facing you, place this Shield between the phone and your body with the AegisGuard™ Label facing away from you. The VELCRO® fasteners are not required.

### Pocket, Pouch And Purse Applications

1. The Shield can be cut to size or shape using scissors, such as for pockets with a round bottom. Round corners to prevent fraying.
2. For pockets, cut the top of the Shield at least 1/2 in. (1.25 cm) longer than your wireless product and the width of your narrowest pocket. For small pouches and purses, the Shield should only be cut to size if it is too large. Round corners to prevent fraying.

### Body Style Product Applications

1. Trace your product, such as a wrist or necklace style communication device, on paper, adding at least 1/4 in. (7 mm) to all sides. Round corners to prevent fraying.
2. Cut out tracing with scissors and center on the bottom of the Shield over the black AegisGuard™ Label. Tape it to parts of the Shield that will be discarded to hold in place and carefully cut around tracing. (Figure 1).




### VELCRO® Installation

Do not touch the adhesive on VELCRO® fasteners.

1. Cut the VELCRO® Hook Strip 1 in. (2.5 cm) shorter than the length of your product. Remove backing and center on the bottom of the Shield just above the black AegisGuard™ Label (front) (Figure 2).
2. Remove backing from 1 VELCRO® Loop Dot and place on the upper part of the back of your product in a position that will attach securely to the VELCRO® Hook Strip. Repeat procedure for the lower part of your product. (Figure 3).
3. Allow adhesive to set 24 hours. Center the back of your product on the Shield just above the bottom of the black AegisGuard™ Label (front) and press lightly. To remove, hold the Shield with your thumb under the edge of your product and carefully lift the product away from the Shield.

### Illustrations

Please see the back insert for installation instructions.

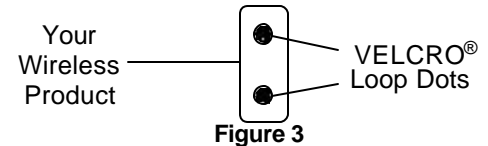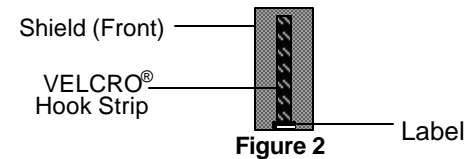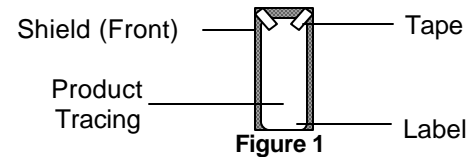

### Cleaning Instructions

Gently wipe the front of the Shield with a damp sponge and allow to air dry. Do not attempt to clean or wipe the back of the Shield.

### Aegis Corporation Limited Warranty

For one (1) year from the date of purchase by the consumer Aegis Corporation (AEGIS) will repair (or at its option, replace) this product free of charge if defective in material or workmanship. This warranty excludes damage caused by abuse, accident, improper installation, misuse, neglect, or normal wear and tear.

This product must be delivered, or shipped freight prepaid, to the AEGIS location listed below with a copy of proof of purchase in the form of a sales slip or invoice. In the event this product proves to be defective, your sole remedy is the remedy as stated in this warranty, and under no circumstances shall AEGIS be liable for any loss or damage, direct, incidental or consequential arising out of the use, or inability to use, this product caused by any defect whatsoever in this product.

This warranty gives you specific legal rights, and you may have other rights which vary from place to place.

AEGIS CORPORATION  
614 Dartmouth Terrace Court  
ATT: Customer Service - 303  
Wildwood, Missouri 63011-5443 USA  
Tel: (636) 273-1011 Fax: (636) 273-1015  
www.goaegis.com